 


iseeBell

Home Camera


QuickStart Guide

IN THE BOX

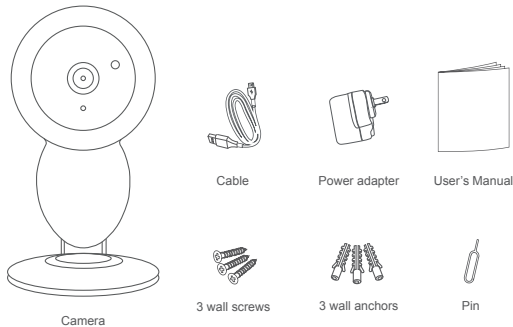

⚠ WARNING: Choking hazard – small parts, keep out of reach of children.

MEET YOUR CAMERA

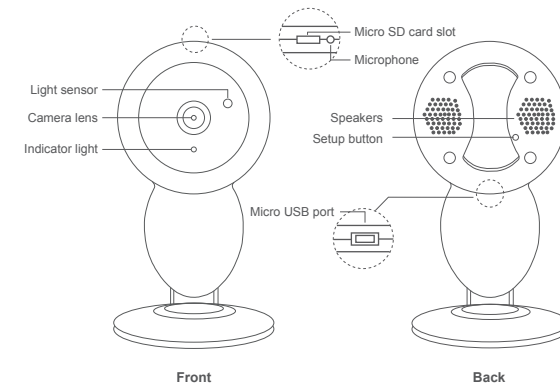


WHAT YOU'LL NEED

- Wi-Fi, Wi-Fi password, and a working broadband internet connection with at least 2 Mbps upload speed. SDL may not qualify.
- A compatible phone or tablet with iseeBell app.
- An iseeBell account
- A power outlet

GET STARTED

1. TURN ON HOME CAMERA

Connect one end of the USB cable to the Micro USB port on the back of your iseeBell Home Camera, and the other end to the power adapter. Then plug the power adapter to a wall outlet that is close to the router, and make sure the Wi-Fi access is available.

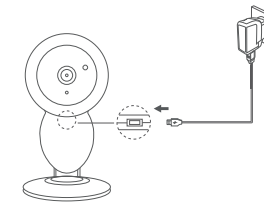

INDICATOR LIGHT PATTERNS

- In Red :**
 - Solid red - Powered up
- In Blue :**
 - Flashing slowly - Connecting to the server
 - Flashing rapidly - In pairing mode
 - Solid blue - Connected to the server
- No light:**
 - Powered off

2.ADD IT TO YOUR ISEEBELL ACCOUNT

Download the iseeBell app from the App Store® or Google Play™. Open the app and tap

“CREATE ACCOUNT” to create an account. Then tap “Add a device”, choose Home

Camera and follow the instructions.

If you already have an iseeBell Account: Tap the plus icon in the top-right corner of the app

home screen. Then choose Home Camera and follow the steps.

If you need help, go to iseebell.com/support



3.MAKE SURE IT'S STREAMING

Before you unplug it and relocate the camera, make sure it can get Wi-Fi in the spot you've


picked.

Plug the power adapter to an outlet where you'd like to place it and check to make sure it's

streaming live video to the iseeBell app. If you don't see video, the Wi-Fi may not be strong

enough there – you'll need to find a different spot, move your Wi-Fi router, or invest a Wi-Fi

extender.

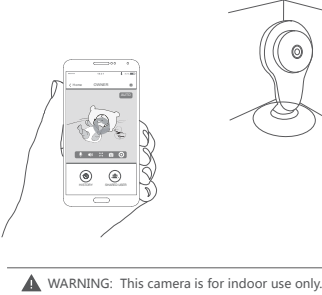

⚠ WARNING: This camera is for indoor use only.


4.ENABLE LOCAL RECORDING (OPTIONAL)

To enable local recording and enjoy the playback of video clips, please insert a Micro SD

card (not included) to the slot as shown.

The iseeBell Home Camera supports a minimum of 8GB, maximum of 32GB, class 4 &

above Micro SD card.

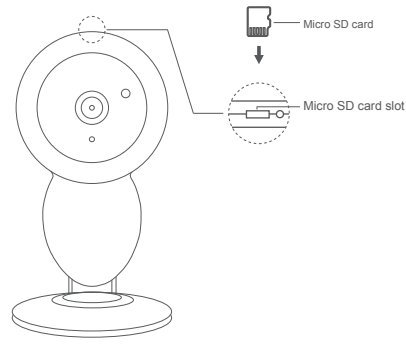


5.MOUNT IT ON A WALL (OPTIONAL)


Hold the base and twist the camera body counterclockwise (yes, you will hear a clicking).

Mount the base on the wall using the screws and anchors provided or double-side tape

(not included). Install the body back by twisting clockwise.

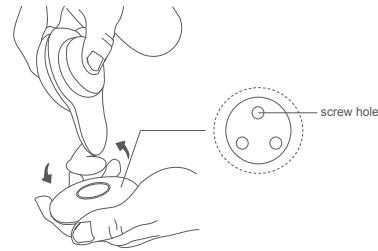

ENJOY YOUR NEW GADGET

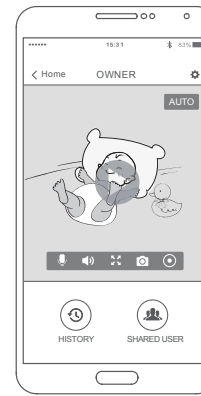

- : Mute your speaker
- : Disable/enable your mobile device microphone
- : Take a snapshot
- : Record a video clip
- : Zoom in/out
- : Access iseeBell settings
- : Adjust picture quality
- : Check activity history
- : See wider areas – tilt your Phone to left or right, or swipe your phone screen to left or right

After Micro SD card is inserted

- : Watch back recorded video - Slide the time scale to the left or right

EXPLORE MORE USES

Baby monitor

Enjoy peace of mind day and night by placing it near the crib. Watch your loved one anytime.

Pets watcher

Curious about what your little buddy is doing at home while you are away? Place it on the

ground and talk to them when you miss them.

Nursing care monitor

With the unlimited sharing feature, you won't be the only one sees and speaks to your parents

from remotely every day. Love starts from one fingertip.

