 


# INDOOR CHIME SETUP

## *GUIDELINES*

## INDOOR CHIME

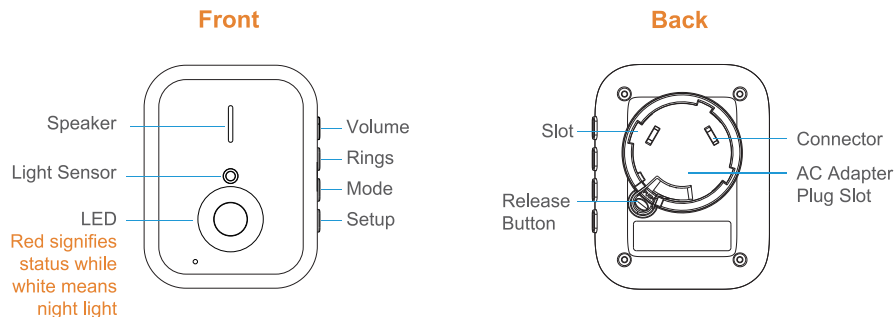 


### Features

- Chime and light notification
- Choose from 25 ringtones
- Volume control
- Night light
- Pair up to 3 iseeBell devices
- 110-yard transmission distance


## INDOOR CHIME

### Assemble

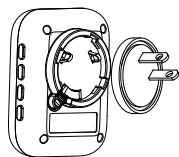


- To assemble, line up the AC adapter plug with the slots. Then push the plug in and twist until it clicks.

### Disassemble

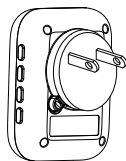 


- To disassemble, press and hold the release button and twist the AC adapter plug.


### Available AC adapter plug

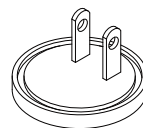 


US/CANADA

 

AUSTRALIA

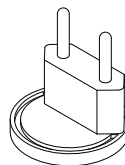 

EU

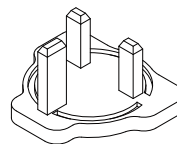 

UK

---

## INDOOR CHIME

### How to set it up

#### Step 1 Set up your device

- Plug your iseeBell indoor chime into a 100 – 240v outlet. It will let out a beep, light up, then off.
- Press the **Mode** button, so that it switches between “chime only”, “light only” and “both chime and light”. Select your preferred mode for when someone rings the bell. “Chime only” will beep once. For “light only”, the LED blinks once while “Both Chime and light” will have your iseeBell beep once and LED blinks once as well.

#### Step 2 Pair your iseeBell indoor chime with your iseeBell video doorbell

- Press and hold the **Setup** button for 5 seconds.
- LED light will turn red and indoor chime will enter pairing mode with a beep.
- Press the Call button on your iseeBell Video doorbell while in pairing mode.
- Indoor chime will react accordingly based on your mode selection.
- To exit, press the **Setup** button and it will beep twice.
- Indoor chime will automatically exit pair mode after 10 seconds if you don't press any buttons.
- Important note: One indoor chime can pair with at most 3 video doorbells.

---

## INDOOR CHIME

### Select a Ringtone

Press the **Rings** button to select the one you like. You have up to 25 choices.

### Control the volume

- Press the **Volume** button to turn up the volume.
- Keep on pressing the button to loop among high, medium and low.
- Choose the volume level you want.

### Select Night light mode

- Press and hold **Mode** button, it will beep once and LED will blink white. It is now in Auto mode. The LED will light up at night and will go off when it is bright out.
- Or Press and hold the **Mode** button. It will beep twice and LED will light white. It is in LED mode and LED will light up all the time.
- To put off night light, press and hold the **Mode** button. It will beep three times and LED will go off. This is the dark mode and LED will not light up at all.

---

## INDOOR CHIME

### Restore to factory settings

- Unplug the indoor chime first.
- Press and hold **Setup** and **Mode** buttons at the same time.
- Keep holding the two buttons and plug the indoor chime.
- The chime will beep once. The LED will blink.
- Release the two buttons.
- The indoor chime is now set to factory default settings.
- It will beep once again.

### Customer Service

If you encounter any challenges during product installation, kindly visit [www.iseebell.com/support](http://www.iseebell.com/support) or call us for help.

Website: [www.iseebell.com/support](http://www.iseebell.com/support)

24hr toll-free: 1.888.600.4010

Email: [support@iseebell.com](mailto:support@iseebell.com)

---

## INDOOR CHIME

### Warning

This product complies with the FCC rules. You should not use it if:

- It causes harmful interference.
- You don't want it to accept any inference, including the one that may cause undermined functioning.

You agree that changes or alterations not approved by the party responsible for compliance can void your authority to operate the product.

### NOTE:

You agree that the manufacturer is not responsible in any way for any radio or TV interference when you modify this equipment without our authorization. Such modification will automatically make the user's authority to operate the equipment null.

We do not make any warranties or guarantees, direct or indirect, as to the usability of this product for any other purpose, except as specified. We will not be answerable for any and all indirect, incidental, special or punitive damages, claims or the loss of any documents or data.

To the fullest extent permissible by law, our liability to any user shall not be greater than the amount paid for the product.